KM-12-A

3 PHASE AMP-HERTZ METER TRUE RMS









TECHNICAL SPECIFICATION

Power Supply		230 VAC ±15% 50-60 Hz
		115 VAC ±15% 50-60 Hz
Power Consumption		2.5VA
Display		7-Segment, Size 0.56 Inch, 4 Digit, 3 Rows
Input	Current	Connection 3 CT, Driect
	Current (Direct)	0.05 - 10 A
	lb(Base Current)	5 A
	Current Transformer Ratio	1-2000
	Primary	9999 A
	Secondary	0.2-5 A
	Accuracy Current	±1.0% FS
Communication	Accuracy Frequency	45-65 Hz ±1.0%
	Protocol	MODBUS RTU
	Baud Rate	1200, 2400, 4800, 9600,19200, 38400, 57600 bps
	Parity	None, Even, Odd
	Stop Bits	1, 2
	Data Bits	8 Bits
	Support Device Node	128
Ambient	Temperature	-10 °C to 60 °C
Operation	Humidity	85 % RH Non-Condensing
Ambient Storage Protection Degree	Temperature	-20 °C to 80 °C
	Humidity	85 % RH Non-Condensing
	Front Protection Rating	IP52
	Case Protection Rating	IP30
Installation		Panel Mounting
Material		ABS-V0
Size		96 x 96 x 76.6 mm.
Weight		465 g.
0.11		

DESCRIPTION


- KM-12-A is a device that measures current value. Can display three phase R, S, T simultaneously
- 7-Segment display size 0.56 in 4 digits , 3 rows
- Measurement area
 - : Current: 0.02-1 O A (in case of direct connection)
 - : Maximum current of 9999 A (in case of joining with CT)
- Can be combined with CT up to 10,000 / 5A
- High accuracy TRUE RMS measurement.
- Frequency range 45-65 Hz
- LED status indicator and power unit.
- Can communicate with computer via RS-485 port MODBUS RTU PROTOCOL
- Peak Hold to see the maximum current in the system

OPERATION

The display will have a 3-Page display of current measured value, Hz, and Peak Amp Avg. Peak Amp is calculated as an average of 15 minutes with the arrow keys. The current value is displayed and when the down arrow is displayed, the Peak Amp is displayed. On Peak Amp display, the Peak LED will blink while displaying.

For Com LED (Communication) Used in Models with Option and Com LED (Communication) will flash every time there is communication

Display Amp ($Key^{\hat{h}}$)

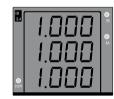

Display Amp Phase 1,2,3

Display Peak Volt (Key∜)



Display Peak Amp

Display Hz (Key[♠])




Display Hz



3 PHASE AMP-HERTZ METER TRUE RMS

WIRING DIAGRAM

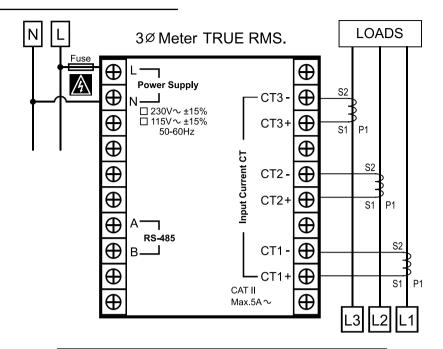




- Make sure the correct wiring connection before turning on electricity. Mis-wiring may cause malfunction of the unit and fire.
- Never modify the unit to prevent damage or incident such as malfunction and fire etc.


DIMENSION

SERIAL COMMUNICATIONS

 $\,$ KM-12-A can read parameter values measured in real time with the system BUS RS-485 by PROTOCOL. Communication is MODBUS RTU Mode.


A set of commands that can be used with the Meter

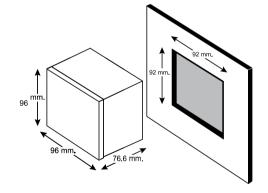

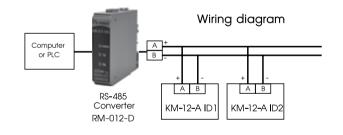

0x03 : Read Holding register 0x06 : Preset Single register 0x04 : Read Input register 0x10 : Preset multi register

ORDERING CODE

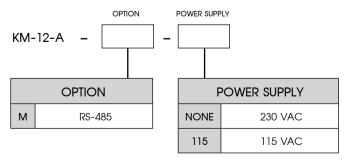

Example: KM-12-A-M refers to the current measured in Amp and has RS-485